


Rear View Mirror

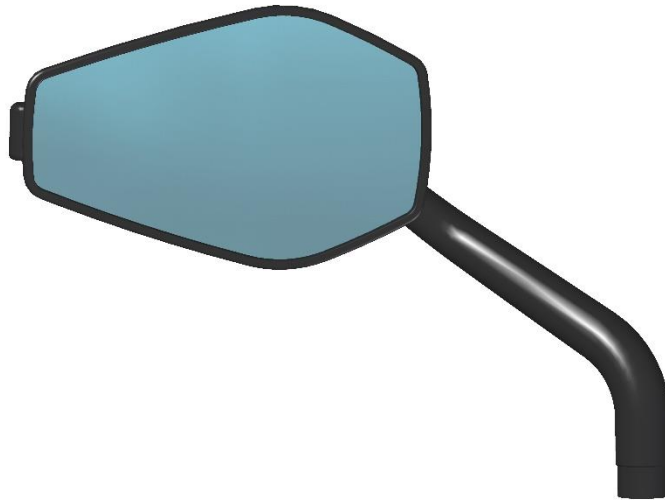

Fitting Instruction and Safety Advices

- Before mounting, **it is essential** to cross check diameter, thread pitch and hand of rotation between vehicle's tap hole and mirror. Always use the right adapter for the thread on the vehicle!
- Mount the adapter to the mirror (use thread-locking fluid) with a wrench. Therefore the counter-nut must be loosed and remounted afterwards.
- Screw the mirror completely into the vehicle's tab hole.
- Afterwards loosen mirror one full turn again, align it and fasten counter-nut.
- **Only Indian Springfield and Chief:**
Use the enclosed spacers between the mirrors and the vehicle.



Finally, check handlebar's working clearance over the whole steering angle. If mirror arm is damaged or bended after any kind of impact or tumbled bike, replace whole mirror.

The mirror's scratch protection is replaceable and available as repair-kit! To replace, remove the "Wunderkind-Custom" pin and loosen the screw underneath. Push the scratch protection out sideways.